



# Nikon Coolpix 4100 Batteries Replacement

Written By: Joshua Sweeney



## Step 1 — Batteries



- Flip the camera over so the bottom is facing up.

## Step 2



- Push down on the grey button on the battery compartment that says "push"



## Step 3



- Remove the batteries.

⚠ When replacing batteries, be sure to install them in the correct polarity.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 07:35:23 AM.